How To Set Network Sharing for Amiko SHD-8900 Alien



Network Mounting on Amiko SHD-8900 Alien

PART 1 - On the Windows PC

1. Go to Computer and browse to the desired folder to be shared



2. Right-click on the desired folder, and select Properties (or press Alt+Enter)

		Supris + Supris Additionality + State and + Are at	Auritation II + CL O		
		Norm Data Brandm Bit Million Bit Million Bit Million Bit Million Brandmin Bit Million Bit Mi	ellent type tim		
	3 6 10 2	V Debut of U for the head of the second seco		N Y A FILLION	
3. In Properties, a	go to Sharing, and clic	k on Advanced Shari	ng		\sim
	My Stuff Properties General Sharing Security Previous Network File and Folder Sharing My Stuff Not Shared Network Path: Not Shared Share Advanced Sharing	ous Versions Customize	Advanced Sharing		R
	Set custom permissions, create m advanced sharing options.	ultiple shares, and set other	Share name: alienstuff		
	Password Protection People must have a user account computer to access shared folder To change this setting, use the N	t and password for this s. etwork and Sharing Center.	Limit the number of simultan	eous users to: 20 🚖	
	ОК	Cancel Apply	Permissions Qachi	ng Cancel Apply	

4. In Advanced Sharing, enable the "Share this folder" option, and set a Share Name for the shared folder. This name can be different than the folder's name, however for easier installation please do not use any special character, such as 'á' or 'ä', or spaces.

5. Click Premissions

Share Permissions			Share Permissions	
& Everyone			SohnDoe (ZSOZSO-DELL	VohnDoe)
Permissions for Everyone	Add Allow	<u>R</u> emove Deny	Permissions for JohnDoe	Add Remove Allow Deny
Full Control Change Read			Full Control Change Read	
Leam about access control and I	cancel	Apply	Leam about access control and	<u>i permissions</u>

- Inside Premissions, add a user that can access the Shared folder.
- After the user has been added, select the user, and check to Full Control Allow

PART 2 - On Your Alien

1. Go to Main Menu > Settings > Net Settings > Network Hard Disk

2	System		
Basic Setting PVR/HDD Setting	FTI	IP config P Password	
Net Setting Upgrade	Netw	ork hard disk	
OK Enter	<table-cell-rows> Change Item</table-cell-rows>	EXITExit	

2. You can set up up to 6 different network shares on Your Alien, by switching between Network Drives (U: / V: / W: / X: / Y: / Z:)

Sec.	Network hard disk	
Network hard disk na	ame z:	
Service type	CIFS	
Share folder	alienstuff	
Server IP	192.168.0	. 183
User Name	JohnDoe	
Password		
Status	Inactive	
NV Enter	Change Item EVI	TEvit

- Set the Service Type to CIFS
- Input:
 - o Your Share Name (which has been set on Your Windows PC)
 - o The IP address of your Windows PC
 - The Username (which has been set to have Premissions for the Shared folder)
 - The Password for the Windows Username (this is optional)

3. Select Status, and set it to Active

Network hard disk name z:	
Service type	iff 0 . 183 96

4. If all settings were correct, you should see Active in the Status:

Network hard disk name	2:
Service type	CIFS
Share loider	alienstuff
Server IP	192.168.0.183
User Name	JohnDoe
Password	
Status	Active

Now You're able to view the network drive, in the File List:

	File list		
Group <all> /storage/</all>	,		
Z Pr	ess OK enter Name Type Size	File System Available Used Used%	Ext3 590 KB 4.931 MB 90%
📕 Group			Sind
♦ Switch frame	⇔ Change Item	EXITExit	

Possible problems:

- Your firewall is blocking the communications between Your PC and the Amiko SHD-8900 Alien
- Your Windows credentials (Username) are containing special characters (such as 'á', 'a', '~', etc...)
- The selected user does not have premissions to access the desired folder

www.amikostb.com